

Firma Gryc Tomasz Gryc
ul. Chełmżyńska 180E, p. 220
04-464 Warszawa
Phone +48 22 879 79 60
www.gryc.com.pl
info@gryc.com.pl



Operating manual for 009.000.254-1 and 009.000.254-0 keypad locks



1. How to use

Locking and unlocking

Unlocking

- I. Key in the manufacturer's code: "1234" and press "OK".
- II. You will hear a long buzz.
- III. When the LED lights up in green, the lock is unlocked.
- IV. Turn the knob 180 degrees.

Locking

Turn the knob 180 degrees into the original position.

2. Settings

I. Changing the code

- a) Key in the manufacturer's code: "1234" and press "OK". You will hear a long buzz and the LED will turn green.
- b) Hold the "OK" key down for about 2 sec. The LED will start flashing. Enter a new code and press "OK". When you hear a long buzz, the code has been changed.

II. Activating the public mode

- a) Enter the code and press "OK". You will hear a long buzz and the LED will turn green.
- b) Hold the "OK" key down for about 2 seconds, when the LED starts flashing, press "OK" again.

- c) Enter the code "44", then press "OK". When you hear a long buzz, the public mode has been activated.

III. Setting a one-time code

- a) Press "OK"; the LED will start flashing.
- b) Enter a one-time code (from 4 to 15 digits).
- c) Press "OK", when you hear a long buzz, the one-time code has been set.
- d) * Remember: a one-time code can be used to open the lock only once, after relocking the code is automatically deleted from the memory. If you want to open the lock again, you must start the procedure of setting a one-time code again.

IV. Switching off the public mode

- a) Key in the code and press "OK". You will hear a long buzz.
- b) Hold the "OK" key down for minimum 2 seconds. The LED will start flashing, press "OK" again.
- c) Enter the code "43" and press "OK" again. When you hear a long buzz, the public mode has been switched off.

V. Switching on/off the code masking function

- a) Key in the code and press "OK". You will hear a buzz.
- b) Hold the "OK" key for minimum 2 seconds. When the LED starts flashing, press "OK" again.
- c) Key in the code "42", press "OK"; when you hear a long buzz, the function of masking the code has been activated.
Key in the code "41", press "OK"; when you hear a long buzz, the function of masking the code has been switched off.

3. Functions

- I. A forgotten code may be retrieved with a USB KEY. The code will be changed to the manufacturer's code: "1234".
- II. The function of code masking: you may mask the original code by entering a false code before or after it (maximum 16 digits).
- III. The alarm will be activated after an erroneous code has been keyed in four times. The lock will be blocked for 60 seconds.
- IV. Automatic low battery voltage message.
- V. The lock comes with 3VCR2032 batteries. The last code entered will not be lost after the battery has been replaced.

4. Problem solving

Problem	Cause	Solution
After keying in the code a double buzz can be heard. The lock opens with delay	Voltage too low	Replace batteries
After keying in the code a repeated buzz can be heard. The lock will not open	The knob is in a wrong position	Turn the knob to the right position

No sound signal while touching the keys, but the lock can be opened	The buzzer does not work	Replace the buzzer
---	--------------------------	--------------------

Video instruction manual – see our YouTube channel

https://www.youtube.com/playlist?list=PLWEE4acfZCZe_FbPCvr2NYQQzNo-y8e6-

